

# HP6 Instructions:

## Battery Installation

- Turn the end cap in a counter-clockwise direction to remove the cap.
- Place two AA batteries into the light, positive end of the battery first.
- Replace the tail cap and turn it clockwise to tighten it until it is fully closed.

## Quick Cycle Switch Operation

This flashlight is equipped with COAST's Quick Cycle Switch™, featuring high, and low beams.

- To activate the high beam from the off position, press the on/off switch until it clicks once, then release.
- To activate the low mode, press the on/off switch until it clicks a second time, then release.
- The light can also be operated in "momentary" mode. Momentary mode is activated by partially depressing the on/off switch (less pressure than required for a full click). The momentary switch will cycle the light through the high and low beam modes.
- Any time the light is turned off for more than five seconds, the high/ low cycle will reset and the high beam will be activated when the light is turned on again.
- NOTE: Some versions of the HP6 include a strobe mode. Strobe mode is activated in the second position of the quick cycle switch.

## Pure Beam Focusing Optic with Speed Focus

- This flashlight is equipped with COAST's Pure Beam™ Focusing Optic with Speed Focus™ that allows the user to choose between a broad flood beam and a focused Bulls-Eye Spot™ beam for long distance illumination.
- To adjust the beam into the Bulls-Eye Spot™ mode, slide the head of the light all the way forward.
- To adjust the beam into the broad, flood light mode, slide the head of the flashlight back.
- The beam can be locked into any position, from full flood beam to spot beam. To lock the beam in position, turn the head of the light to the left.